



E-One clinic

User Manual

# TABLE OF CONTENTS

---

É•One PACKAGE CONTENTS	4
PRECAUTIONS FOR USE	6
GLOSSARY	12
INFORMATION PROVIDED BY É•One TOUCH SCREEN	14
HAIR REMOVAL WITH THE É•One	18
CHANGING THE OPTIC CARTRIDGE	32
SOFTWARE OPTIONS	36
PROHIBITED HANDLINGS	40
USING THE ACCESSORIES	42
MAINTENANCE	44
ASSISTANCE	46
TECHNICAL CHARACTERISTICS	48
STANDARDS	53
WARRANTY CONDITIONS	54
CONTACT	55

Dear client,

You have just purchased an É•One and I thank you for your custom.

Habits change and É•One is evidence of this. You can now safely have access to a hair removal technology that uses professional quality pulsed light in the comfort of your home.

I have personally ensured that the utmost attention be paid to the implementation of each É•One; you will see, that É•One is an exceptional product.

I hope that you will be completely satisfied with your É•One and that you will share your experience on our company's official website at [www.esw-beauty.com](http://www.esw-beauty.com).

Yours Sincerely,



Yves Vincent  
Creator of É•One


# E→One PACKAGE CONTENTS



1 base E→One and applicator.




1 clean - optical spray

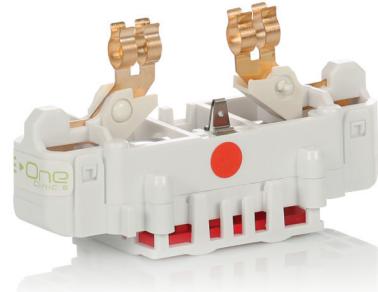


1 optic with filter included - consumable cartridge and its optical filter (included in the applicator of your E→One).



 1 activation card E→One



1 stop Guide plate.

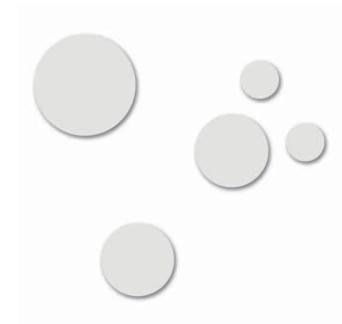

1 patches self-adhesive patches.



1 pen - pencil of work and sharpener.



1 gel - flashing intended gel.



1 mask - safety glasses.



1 hair removal follow-up.



1 user manual.



1 power cord.



**CAUTION: YOU MUST KEEP ALL THE ELEMENTS OF THE ORIGINAL PACKAGING (BOXES, PACKAGING ETC.).** The manufacturer's 2 year warranty will cover parts and labour only if the device is returned with all its elements in its original packaging. You must therefore carefully maintain the entire original packaging in which E→One was delivered to you.



**REMINDER:** Only E-Swin is authorised to sell E→One and its accessories: *optic, clean, patches, pen, gel, mask, fun*, etc. on its own website [store.esw-beauty.com](http://store.esw-beauty.com)

**WARNING:** Using E→One is exclusively restricted to use at home and must not be used for professional purposes.

All manufacturer's warranty will be voided if the device is used for professional purposes or if the *optic* cartridges are used at an abnormally high rate. An E→One device that has lost its warranty will not be able to recover it afterwards.

## I FOR YOUR SECURITY

Before using **E•One**, please read the following information carefully:

- Voltage: 100 -240 V.
- Nominal frequency: 50-60 Hz.
- Maximum power consumption: 240 VA.
- Make sure that the voltage corresponds to that of your installation. Any improper connection may cause permanent damage not covered by warranty.
- Make sure that the power outlet to which you are connecting your **E•One** is undamaged, in perfect working condition and that it does not interfere with the proper use of your **E•One** (the power outlet must be easily accessible).
- This device is intended for personal use at home only and not for professional purposes.
- Do not unplug by pulling the cable of **E•One**.
- Never use **E•One** with wet hands.
- **E•One must never be used in the shower, bath or in any place where water can splash the device (applicator or base).**
- Never immerse the base of **E•One**, its applicator or the **optic** cartridge in water.
- Never use **E•One** if damaged, never use in case of a functional anomaly appearing on the touch screen, or following a fall (non-visible damage can be detrimental to your safety).
- This device can be repaired only with special tools. For any problems after delivery, please contact us on our website [www.esw-beauty.com](http://www.esw-beauty.com).
- **optic** cartridges and, more generally all accessories, must be ordered only via our shop [store.esw-beauty.com](http://store.esw-beauty.com). We disclaim any responsibility for the use of consumable cartridges and accessories from another manufacturer.
- **When using the device, make sure to place it on a flat surface, in a place where the potential of a fall can be avoided.**
- **E-Swin SAS disclaims any responsibility for any damage resulting from improper use of the device or use other than described in this manual.**

- **One pair of safety glasses (mask) is provided with the device: these glasses shall be worn at all times when using the device. If other people are close to you while using the **E•One** they should also wear the mask.**
- **When **E•One** is being used, it must not come into contact with hair, the periorcular region delimited by the safety glasses mask (for example: eyebrows and eyelashes must never be flashed with **E•One**), clothes or any other object, so as to prevent all risk of injury, blockage or impairment.**
- The applicator tip must not touch the **mask** at the time of the flash.
- **Never use near an aerosol, a heat source, or any other electronic devices.**
- **Do not stack on top of other electrical devices.**
- Your **E•One** is provided with a power cord (2 meters long) and an applicator cable (2 meters long). Do not use any extension cables or any cable other than those provided by E-Swin SAS, as this could render the equipment non-compliant from an electromagnetic point of view.
- The wireless communication equipment must be kept away (about 3 meters) because they may interfere with the proper functioning of the device.
- The device must be installed in an environment unpolluted by electromagnetic disturbance (computer, electrical appliances...).

## DO NOT USE THE E•One

- If you are pregnant or have diabetes.
- To treat white, grey or red hair. Specifically, certain people are born as red phototype I (red hair type). As adults these people may experience a reduction of this essentially orange colour. However, the melanin structure of this hair retains characteristics that render light technologies ineffective for hair removal.
- On very dark skin or black skin.
- On an injured, burned, or infected skin.
- **On skin that has been sunburnt and whose recovery time is less than one month.**
- On skin lesions of unusual aspect, you must first have a medical consultation with your doctor.
- On high-risk areas (blemishes, birthmarks, warts, unhealed wounds...).
- On moles: if they are located on the zone to be treated, they must first be protected, specifically by covering them with the self-adhesive patches provided with your E•One.
- On tattooed areas: permanent makeup (e.g. lip tattoos) or cosmetic tattoos, whatever their colour. If this is the case, use the delimitation plate stop that came with your E•One.
- If you have a skin condition (eczema, inflammation, acne...).
- If you are taking medication that can lead to photosensitivity (please ask your doctor before use)
- If there is a history of skin diseases, you will need to obtain medical advice before using the E•One.
- Do not use on animals.

## KEEP OUT OF REACH OF CHILDREN

- Any use of E•One by an under aged person must be performed under the supervision of an adult.
- Always store away the E•One after each use, out of reach of children. Unplug the power cord and store it in its original bag and wind back the applicator cable around the applicator support cables provided for this purpose.

## CAUTIONS REGARDING UV

### SUNBEDS / SUNSHOWERS OR ARTIFICIAL UV IN A BEAUTY PARLOUR:

You should take care about the use of artificial UV radiation.

Regarding high pressure UV dispensed by high powered machines, it is advisable to wait a few days before or after such a session before starting treatment with E•One.

### NATURAL UV:

When exposed to sunlight after a treatment session with E•One, it is imperative to use a sunscreen of very high protection on the treated areas for 2 weeks following the session.

## SELF-TANNING PRODUCTS

Do not use E•One if you have applied a self-tanning product on the area to be treated; wait until the effects of the self-tanning product have disappeared completely before using E•One.



# USAGE PRECAUTIONS

## I POSSIBLE SIDE EFFECTS WITH E▶One

When used properly, the risk of adverse effects, such skin rashes or burns, is extremely reduced but still exist. If these effects occur, you must stop using the device immediately.

A simple solution is to test the device on a small area of the skin before the full session. The absence of skin reaction will enable a perfectly safe use of the device.

When your E▶One hair removal device is used as directed, side effects and complications are rare. However, all cosmetic treatments, even those designed for home use, involve certain risks. This is why it is important to understand and accept these risks and possible complications when using a pulsed light hair removal system for home use.

## I PERIMETER OF USE OF E▶One

E▶One, designed and manufactured by E-Swin is a device of health regulated of class IIa, with CE marking delivered by CE 0197 organisation.

E▶One may be used for the following applications:


- Treatment for hair removal in relation to hormonal or idiopathic hirsutism,
- Depilatory treatment for purely cosmetic purposes, on all parts of the body outside the peri-ocular region.



## THE BASE



## THE APPLICATOR

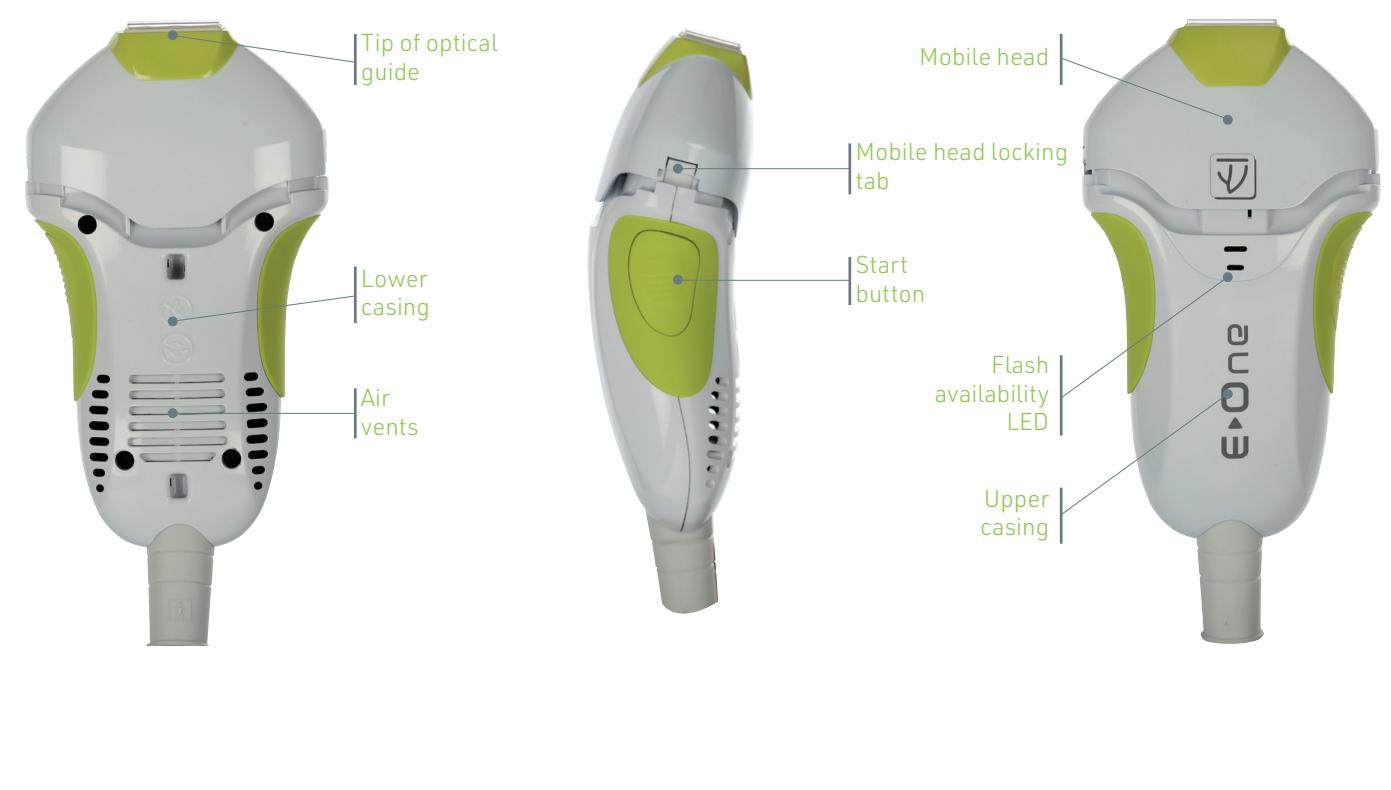

## ON / OFF OF THE DEVICE

- 1 On/off switch.

## AREAS OF SAFETY ICONS

- 2 Spillage of water on any part of the device is strictly prohibited.
- 3 E•One must not be used in certain physiological or medicated contexts (pregnant women, photosensitising drugs...).
- 4 Reading this instruction manual before using E•One is mandatory.
- 5 Wearing the safety glasses (mask) is recommended.

## HOW TO PROGRAMME A HAIR REMOVAL SESSION

- 6 Silhouette of man / woman. This area allows you to choose between "woman" and "man".
- 7 Thickness of the hair. This area allows you to select the thickness of the hair, from the **thinnest (bottom)** to the **thickest (top)**.
- 8 The skin colour. This area allows you to select the colour of the skin, from **the lightest (bottom)** to the **darkest (top)**.
- 9 The level of intensity. The gauge represents the 6 levels of intensity of the issued flash. The arrows adjacent to this gauge enable you to increase or decrease the level of intensity.
- 10 Pause. This icon is displayed on the touch screen throughout the duration of the hair removal session. Pressing it allows you to put the device in pause mode.
- 11 Play. Enables you to cancel the pause mode and to resume the hair removal session.

## THE BASE OF E•One IS EQUIPPED WITH A TOUCH SCREEN



## BROWSING AREA

- 12 These buttons enable you to move from one character to another (22), and to increase or decrease the digits of each character.
- 13 Go back to the previous menu. This icon enables you to modify any selection made previously. It is available only when icons 16 and 20 have been selected.

- 14 Validation of input data (22).

## INFORMATION IN REAL TIME

- 15 Volume activation/deactivation.
- 16 Lock / unlock. This icon enables you to secure your E•One with a PIN code.
- 17 Warning. A number is displayed on the touch screen when this icon is active; it corresponds to an error message (see page 50.).
- 18 Detection of the activation card.
- 19 Temperature of the applicator. This icon is not active during normal functioning of the device. If it blinks, please refer to the corresponding error message (See page 50).
- 20 Cartridge tube. When it is blinks, it means that you can flash (this does not concern this version of E•One).
- 21 Numbers 1 and 2 correspond respectively to the first input, then to the second input that confirms the secure PIN (this does not concern this version of E•One).
- 22 All these characters enables you to enter the secure PIN code of E•One, and also to show the remaining number of flashes at any moment.



# REMOVING HAIR WITH E→One

## BEFORE EACH USE

### VERIFICATION

- Check the power cord (must not be pinched or crushed, wire must not be bare).

- Check the cable connecting the base to the applicator (no visible impairment).

- Check the external optical parts of E→One.

Check that the glass tip of the applicator (optical guide) is intact, and if this is not the case (if the optical guide is cracked or chipped), changing the whole mobile head is essential. Ordering this part is possible at [store.esw-beauty.com](http://store.esw-beauty.com).

- Verification of the internal optical parts.


- In all cases, **the device must be unplugged before** you start disassembling the mobile head.

- Before each use, and before plugging-in E→One, you must check the integrity of the internal optical parts: tube, filter (flat red piece of glass), and optical guide. The filter must be cleaned systematically before each hair removal session with E→One. It must be clean and free of dust.

To proceed to the verification code:

- Press simultaneously on the 2 locking tabs of the mobile head, and remove it (1).

- Delicately place the mobile head on a flat surface.

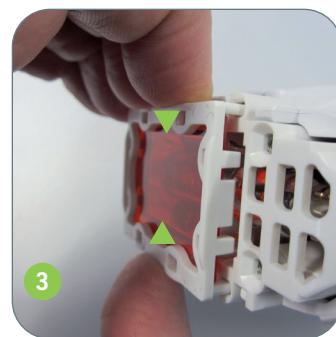

- Removing the optic cartridge with filter.

- Once the mobile head is removed, the optic cartridge with filter is then visible in the applicator (2).

- Remove the cartridge from the applicator: press firmly on the filter support (3) and pull (4). The optic cartridge with filter now presents itself to you (5); it is imperative to hold it only by the plastic parts.

- Cleaning of the internal optical parts.

- Once the filter cartridge is removed, the transparent optical glass is also accessible (6).

- Using the spray clean: spray it on a lint-free cloth beforehand (7).



**NOTE:** Never spray directly on the optical parts.

Afterwards clean **only** the accessible side of the filter with this cloth (8). Repeat the same procedure for the accessible part of optical glass (9).

**NOTE:** The filter must never be separated from its optic cartridge.

- When cleaning is complete, take the optic cartridge and align it with the applicator with the help of the red dots (10). Push it into the slide way of the applicator by pressing on it (11), so as to ensure that it is properly in position (12).

- Re-attach the mobile part of the applicator by pressing simultaneously on the locking tabs of the mobile head (13), making sure to align the internal red dot of the head with the red dot of the applicator.

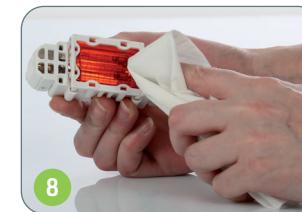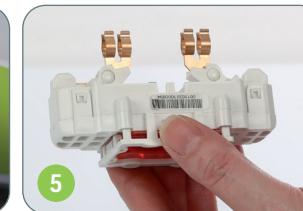

Once you have completed your treatment, you must wait for the fan to come to a complete stop (it may take more than 10 minutes), before switching it off and unplugging it. This procedure enables the internal optical parts to cool down. **The other fans, located in the base of E→One, will only stop once the device is unplugged.**

**NOTE:** For better efficiency of E→One, it is recommended to clean the filter before each use with the spray clean provided when you purchased E→One. Any damaged filter due to non-compliance with the procedure for use is not covered by the manufacturers warranty.

# REMOVING HAIR WITH EOne

## STEP 1

### CHOOSING THE BEST TIME TO USE THE EOne

#### If your previous hair removal method was:

##### Razor:

You can use EOne immediately.

##### Depilatory creams:

You should only use EOne 1 week after your last depilatory cream treatment.

##### Waxing, electric epilator, tweezers:

You should only use EOne 3 weeks after your last depilation treatment.

##### Laser technology, flash lamp or other method:

You should only use EOne after hair re-growth has started.

## STEP 2

### PREPARE YOUR SKIN

- Your skin should be clean, dry and free of any cosmetic product.
- Do not apply any cream, moisturiser, oil or any other substance on your skin.
- Shave the area to be flashed on **the same day** of the session with EOne.

**NOTE:** It is imperative that the areas of the skin to be flashed are completely free of all hair by shaving (and not by waxing, depilation cream, electric epilator or by any other hair removal procedure). Shaving must be done preferably on damp skin in order to reduce the aggressive effect of the razor.

- Rinse your skin with water. After shaving, the skin should be thoroughly rinsed to remove all the hairs that have been cut.

## STEP 3

### USING OF THE ACTIVATION CARD

These devices operate with an activation card, credited with 3000 flashes. This card is specific to the **optic** cartridge with which it has been ordered.

- Use the activation card of your **optic** cartridge.
- Insert the card on the upper support clip located in the base of the applicator.
- Leave the card in this slot throughout the entire hair removal session.
- At the end of the session, remove the activation card, take care not to damage it, and store it in its case.
- Follow the procedure to switch off the device.



# REMOVING HAIR WITH EOne

## STEP 4

### STARTING AND SETTING UP YOUR EOne

- **Connect EOne to its power cord.**

EOne issues 3 beep sounds; the screen is black (screen A). Just press **anywhere on the screen** to enable all icons to appear (screen B). These icons are explained on pages 14 and 15. The menus are displayed temporarily. Only the safety icons keep blinking.

- **Unlock the safety features (screen C).**

It is mandatory to validate each safety feature by pressing one by one on each safety icon (the order of validation does not matter).

Once all the safety icons are validated, all the other settings icons for the flash will be available.

**If an icon has not been validated, it will continue to blink. You will not be able to set up or use your EOne so long as all the safety features have not been confirmed and pressed.**

- **Setting up your hair removal session.**

Simply give some information to each blinking icon to set up your hair removal session. You do not need to press on the validation icon to select each one of them (14). All the settings must have been pressed to be able to use EOne. If one of them has not been selected, the icon will continue to blink.



- **IDENTIFY YOUR SILHOUETTE (screen D).**

Select man / woman silhouette by clicking alternately on the frame (6). The selected silhouette stays on the screen: the other silhouette disappears.



- **IDENTIFY THE THICKNESS OF THE HAIRS TO BE REMOVED (screen E).**

Choose the thickness of the hair (7), among the 4 thicknesses of hair proposed, **from the thinnest (bottom) to the thickest (top)**.



- **IDENTIFY THE COLOUR OF THE SKIN (screen F)**

Choose the colour of the skin (8), from the lightest (**bottom**) to the darkest (**top**).



**NOTE:** Very dark skin and black skin are not represented here because they are not compatible with EOne.

# REMOVING HAIR WITH EOne

## ADJUST THE DESIRED INTENSITY LEVEL: (screen G)

The arrows located next to the intensity level icon (9), enable you to increase or to decrease the intensity of the issued flash.

Click on one of the two blue arrows, until it gradually reaches the desired intensity level.

When the last setting has been validated, the pause icon (10) located in the browsing area becomes visible.

The icon representing the lamp (20) blinks; the device is ready to flash.

**At any time**, you can change any of these settings; you just need click on the corresponding icon and modify the settings.



G

**NOTE:** By default, the proposed intensity level is adjusted to the minimum. This level enables most users to obtain good quality results, with optimum safety in 100% of cases. Increasing the intensity level of EOne will have the following consequences:

- An increase in the results obtained.
- A reduction of the number of sessions needed to obtain lasting result.
- An increased sensation on the skin when the flash is issued.
- An increased risk of rashes and even burns on highly pigmented skin (olive) after a session.

**IN PRACTICE:** Always start with a test using the basic setting (the default adjustment proposed by EOne) then gradually move the intensity up 1 notch until you reach the desired intensity. Issue a flash, then wait 5 minutes after this flash to appreciate the skin reaction. In the absence of skin reaction, you can continue to flash the entire desired area or move the intensity up again by 1 notch and observe the reaction once again (and so on).

## CASE STUDIES

### Screen H

"I'm a man, I have white skin, I wish to remove the hair from my armpits".

My selections will be as follows:

- Man.
- Fair skin (1<sup>st</sup> colour).
- The thickest hair (4<sup>th</sup> thickness).
- Intensity level gauge (level 1).



H

### Screen I

"I am a woman, I have dark skin, I wish to remove the hair on my arms".

My selections will be as follows:

- Woman.
- The darkest skin (5<sup>th</sup> colour).
- Hair (2<sup>nd</sup> thickness).
- Intensity level gauge (level 1).



I




# REMOVING HAIR WITH EOne

## STEP 5

### MARK OUT THE AREA TO BE FLASHED

- Mark out the area to be flashed with the help of the **pen**, by tracing parallel white lines on the large areas.
- If necessary, use the guide plate **stop** to cover a rather large area that should not be flashed (tattoos...).
- Cover small areas that should not be flashed (moles...) with the **patches**.
- After applying a thick layer of **gel** over the entire area to be flashed, move the applicator along the marked out area (refer to the next page to know how to issue a flash).
- The applicator's positioning leaves a 'foot print' on the skin, which enables you to see the area that has just been treated. Thus, from one flash to another, it is very easy to distinguish between an area that has already been flashed and another area that has not yet been. An overlap of about 1 mm is possible.
- Apply a thick layer of **gel** over the entire area to be flashed. It must, **under no circumstance**, enter inside the mobile head.

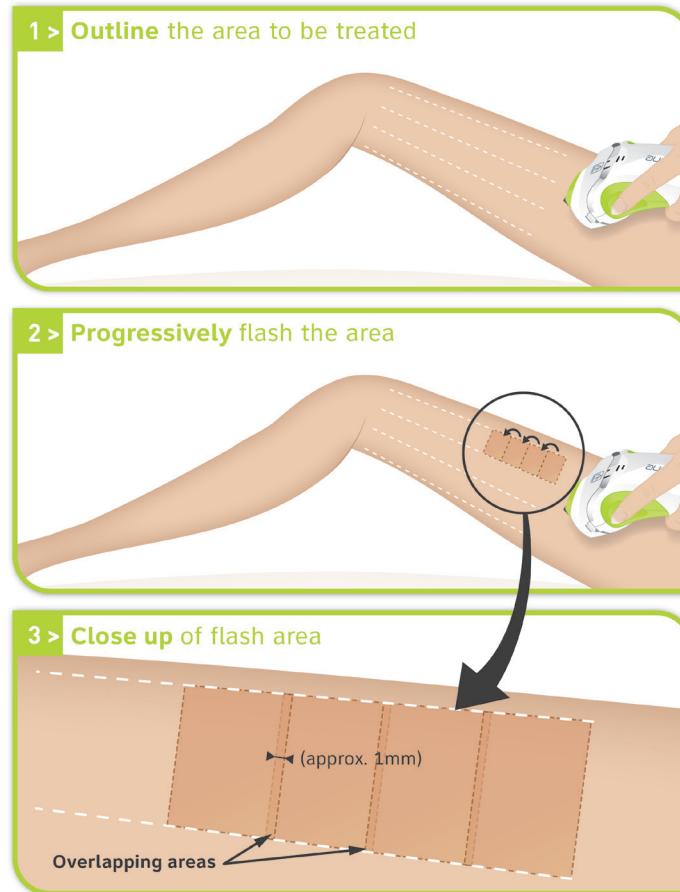

### PRECAUTIONS TO BE TAKEN DURING THE SESSION

- You shall wear your **mask** safety glasses at all times. If other people are around you while you are using **EOne**, they should also wear the **mask** safety glasses.

**IMPORTANT:** Do not flash the periorcular area (located under the **mask** safety glasses protecting your eyes, eyebrows, eyelashes...).

- If you are planning to flash a large area, do not apply the **gel** over the entire area from the beginning: as it will dry out and lose its effectiveness in terms of optical transmission. Therefore apply the **gel** as you progress onto the area concerned. Once the **gel** has been used on the skin and has been flashed, it should under no circumstance, be collected and reused on another area: flashing the **gel** is likely to cause a change in its optical characteristics.

**REMINDER:** The pencil of work **pen**, the **gel**, self-adhesive **patches**, the guide plate **stop**, the safety glasses **mask** to be used must be those supplied with your **EOne**. **The use of any other product may cause skin burns and void the warranty of your device.**



**TIP!** To easily remove the applicator from its base, you must grasp it next to the large white cable. The applicator is then easily unhooked.

# REMOVING HAIR WITH E→One

## ISSUING A FLASH

- To be able to flash, the glass tip of the applicator (optical guide) must be applied onto the skin. Then pressure should be exerted so as to "push down" the head of the applicator, creating a pressure on the skin.

- The flash can then be triggered, by pressing the button located on the side of the applicator.

- The pressure must be released and the applicator must be moved away from the skin.

- The applicator is then moved onto the next area just beside the one that has just been flashed. It can only be triggered again after the indicator light has turned green (if the applicator is triggered again before the indicator light has turned green, you will not be able to issue the flash).

- Make sure that you stretch the skin where it is the thinnest, so that the glass tip (optical guide) of the applicator is in contact with the skin and that you have properly removed all hairs from the area to be flashed.

**NOTE:** For each flash, the treated area corresponds to the range covered by the tip of the optical guide, i.e.  $3 \times 2 = 6 \text{ cm}^2$ . The glass surface (optical guide) at the tip of the applicator must be placed **well flat** on the skin.



## STEP 6

### ENDING THE SESSION

- Press key **1**.
- Once the fan located inside the applicator is off (after 10 minutes or so), the power cord can be unplugged. **The other fans, located inside the base of E→One will only stop once the device is unplugged.**
- Clean the glass tip of the applicator (optical guide) with a damp cloth.
- Finish cleaning the optical guide with the spray **clean** (images **20** and **21**).

**Once you have completed your treatment with E→One, you must wait for the fans located inside the applicator to turn off completely. This enables, among other things, the optical parts to cool down properly. The fans located in the base, for their part, only stop when the device is unplugged.**

- Store your **E→One**.



**Once the hair removal programme has started, the device charges itself: vertical bars scroll at the bottom of the touch screen, from right to left (where icon (22) is located). It also charges after each flash and precedes the display of the number of remaining flashes on the optic cartridge.** If the device is idle for 15 minutes, it will automatically go into "pause" mode.

**NOTE:** If the device remains idle for 10 minutes or so, it will automatically activate the energy saving mode. The fans located inside the applicator will stop running, unlike those located inside the base: these will only stop once the device has been unplugged. For the fans to be reactivated, you simply need to issue a flash.

**NOTE:** After the hair removal session, small red spots may appear: this is a normal reaction and will disappear quickly. In case of sensitive skin, and after a hair removal session with **E→One** do not use any hair removing cream, for a whole week, on the areas that have been flashed.



# CHANGING THE OPTIC CARTRIDGE

This step must be performed with utmost caution. Any improper handling can result in permanent damage to the applicator and to **ε•One** in a more general way. **The warranty does not cover improper handling. We therefore recommend you to be very attentive to the procedure to follow.**

## STEP 1

The cartridge must be changed when the number of flashes displayed is equal to 0. When this happens, the lamp icon (20) appears, but does not blink (screen J).

You can monitor your usage on the touch screen at any time.



## STEP 2

Before turning off and unplugging your device, **you must wait for the fan located inside the applicator to stop operating completely** (this may take several minutes). This procedure enables the optical parts of the applicator to cool down; **the other fans located inside the base of ε•One, will only stop once the device is unplugged.**



## STEP 3

- Turn off the device.
- Unplug the power cord from the device.

## STEP 4

### EXTRACTING THE CARTRIDGE

- Take the applicator and press simultaneously on the 2 locking tabs of the mobile head (23), and remove it.
- Once the mobile head is removed, the **optic** cartridge with filter presents itself in the applicator (24).
- Remove the cartridge from the applicator: strongly pinch the filter support (25) and pull (26). The **optic** cartridge with filter now appears (27); it is imperative to only hold the plastic parts.

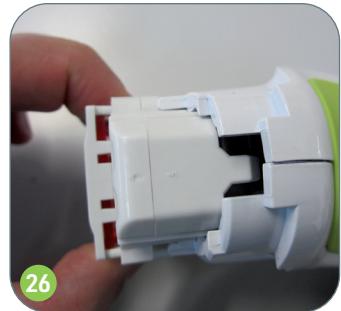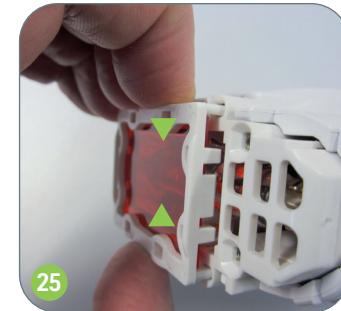


The filter must never be separated from its **optic** cartridge.

# CHANGING THE OPTIC CARTRIDGE

## STEP 5

### RECEPTION OF THE NEW OPTIC CARTRIDGE AND UNPACKING

Remove the new optic cartridge from the plastic box (28 & 29).

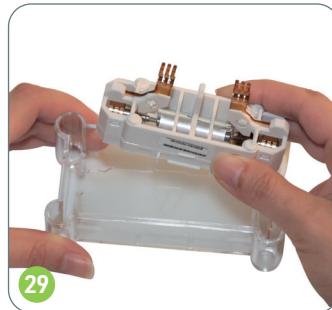

## STEP 6

### INSERTING A NEW CARTRIDGE

- Take the new optic cartridge and check the direction for inserting this new cartridge.
- Align the optic cartridge with the applicator with the help of the red dots (30).

**NOTE:** The cartridges are not symmetrical, so they must be inserted in a specific way, and certainly not any other way. To help find your way, a red dot indicates the part underneath the cartridge. This dot must be oriented to match the side of the applicator that contains a ventilation grid, which is also marked by a red dot. You must therefore align the 2 red dots.


- Push it into the slide way of the applicator by pressing on both sides, so as to ensure that it is properly maintained (31).
- After attaching the cartridge, you must make sure that it is positioned correctly: it must be aligned to the fix part of the applicator (32).



If this is not the case (if it overtakes by more than 2 mm), it means that the cartridge was inserted incorrectly: you must take it out and check that:

- The red dots are aligned (33).
- You have not twisted the electrodes (34).

If you have twisted the electrodes, do not insert your optic cartridge in your E-One as it may cause serious damage to your device. You will need to send us back the damaged cartridge and order another one.

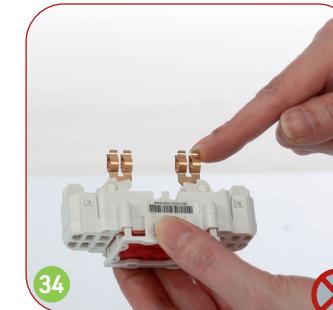

## STEP 7

Before repositioning the mobile head of the applicator, you must always clean the filter (located directly on the optic cartridge) with the spray clean, but use it only on its accessible surface. It is strictly forbidden to spray clean directly on the filter. It must be sprayed beforehand on a clean, dry cloth, and it is this cloth, which must be used to clean the accessible surface of the filter (35).



## STEP 8

Re-attach the mobile part of the applicator by pressing simultaneously on the locking tabs of the mobile head (36) making sure to align the internal red dot on the head with the red dot on the applicator.

## STEP 9

When the number of flashes expires, you must order an optic cartridge (delivered with its activation card). The warranty does not cover improper handling. We therefore recommend you to be very attentive to the procedure to follow.

**PRECAUTIONS:** During the entire procedure of changing the cartridge, you must under no circumstance touch the electrodes of the tube (34). If you accidentally touch the tube or its reflector, we urge you to send us back your cartridge to proceed to an exchange.



**WARNING:** It is strictly prohibited to make any modification of any kind to your E-One.

## I SOFTWARE OPTIONS

### PIN CODE

It is possible to secure your **E•One** by entering a PIN code. As long as a specific PIN code has not been entered, a red bar will appear on the lock icon (16). This means that the device is not locked; there is no code to enter.

By default, the PIN code is 0000. If you do not act on the PIN code, you will not be asked for one each time you turn on the device. If, on the other hand, you change the default PIN code (0000), you will need to enter the new PIN code each time you restart **E•One**.

#### • Change the PIN code

To change the PIN code, you must:

- Click the on lock icon (16). The number 1, located next to the lamp icon (20) will blink: you must therefore enter the 1<sup>st</sup> code.
- Enter the PIN code (4 digits) with the help of the browsing icons (12). They enable you to change the digit of each segment (vertical arrows) and to move from one segment to another (horizontal arrows). Once the 4 digits of the code are entered, validate them by clicking on icon (14). The number 2, located next to icon (20) will blink: you must enter the second code.
- Enter your code a second time (confirmation entry) and revalidate (validation icon 14).

When the input is completed, you will automatically go back to the previous menu.

However, if the second code entered is different from the first code, the warning icon (17) will blink and the error message no.13 will be displayed. You must therefore press the validation icon (14), and redo the entire procedure (enter the PIN code, then re-enter the same PIN code for confirmation).

Following this procedure, each time you start up your device, you will be asked to enter the PIN code. The unlock icon (16) blinks (it is no longer crossed out by a red line). You must enter the PIN code (only once). If the code is correct, the safety icons will be displayed. If the code is erroneous, the warning icon (17) will blink and the error message no.14 will be displayed.

#### • Disabling the PIN code

Disabling the PIN code is possible only when **E•One** is already running, i.e. the PIN code you want to change has already been entered at start-up. You must then click once on the unlock icon (16), and enter the PIN code 1 only once.

#### • Modify an existing PIN code

Modifying an existing PIN code, while a former code already exists, is possible but only when **E•One** is already running, i.e. the PIN you want to change has already been entered at start-up. You must therefore click once on the lock icon (16) and enter the current code once, then validate it (validation icon 14). The device is unlocked; the oblique red line appears the lock icon (16). It is then possible to enter a new PIN code by following the same steps as those described previously.

**NOTE:** If you have mistakenly selected the lock icon (16), and that you do not wish to enter a personalised PIN code, click on the go back icon (13).

**IMPORTANT:** If you cannot remember the PIN code you have entered, you must send us back your **E•One** so that our technical department can unlock your device. This service is not included in the warranty; you will therefore be billed for it.

### BEEP KEYS

By default, the "Beep keys" are activated but it is possible to disable it. This is why we recommend that you choose a simple PIN code that you can remember, but you will also need to write it down somewhere else.




# PROHIBITED HANDLING

## LIST OF SOME ACTIONS THAT ARE PROHIBITED WHEN USING YOUR E-ONE (non exhaustive)


These actions are prohibited because they endanger you or may damage your device in an irreversible way.




Do not cover or block the ventilation grid located on the applicator, with your hands or in any manner whatsoever.

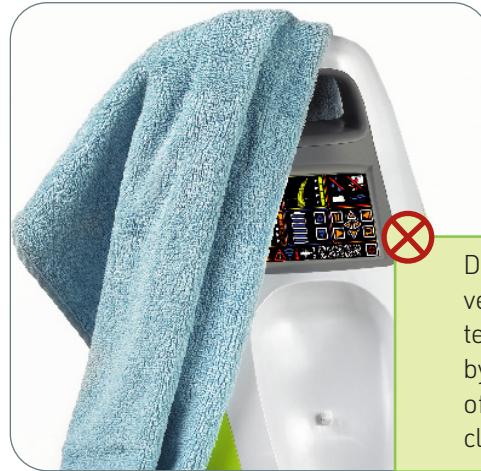

Do not to block the ventilation grid located on the upper part by covering the base of E-ONE with a cloth.

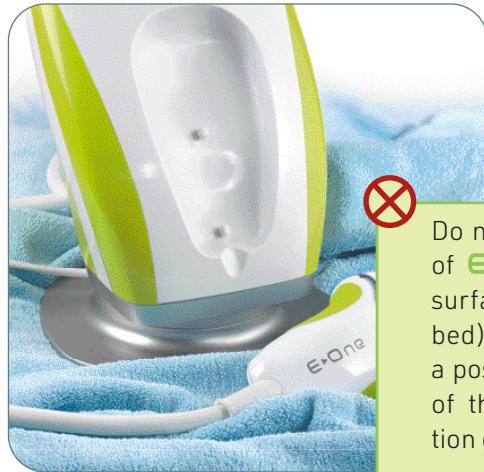

Do not place the base of E-ONE on a soft surface (such as a bed) as it will lead to a possible obstruction of the lower ventilation grid.

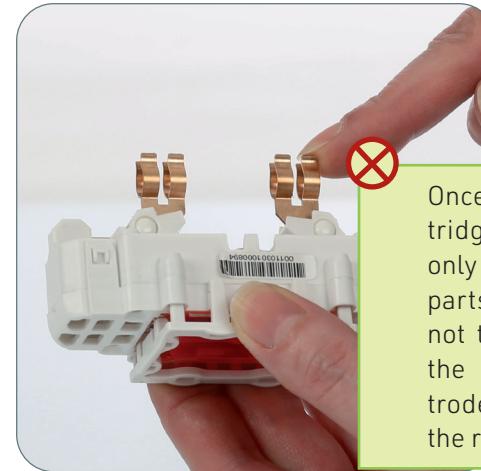

Once the optic cartridge is exposed, only touch the plastic parts and definitely not the metal parts, the lamp, the electrodes, the tube or the reflector.



Never attempt to disassemble the applicator.



Do not attempt to open your E-ONE device. All interventions must be carried out by people duly authorised by the manufacturer.

**NOTE:** Unlike the fans located inside the applicator, the other ones located inside the base of E-ONE, will only stop once the device is unplugged.

# USING THE ACCESSORIES

The **pen** is used to mark out the area to be treated. The pencil of work must be used before applying the **gel**.

**IMPORTANT:** Only the pencil **pen** must be used to mark out the areas to flash. It has been tested not to react to the flashes. Other pencils may lead to skin burns if the flash is used on the line drawn on the skin.



pen

Made in China

The flashing intended **gel** should be stored at room temperature. It is used in thick layer and is applied gradually as the session progresses so that it does not dry on the skin. Once used on the skin and flashed, the **gel** should under no circumstance be collected and reused on another area. A **gel** that has been flashed is likely to lead to an alteration of its optical characteristics. At the end of the session, it must be removed from the surface of the skin with a wet towel or by taking a shower. It must be removed from the optical parts and from the mobile part of the applicator by using a slightly damp cloth followed by the spray **clean**.



gel

Made in Europe

*Active Ingredients: Methylisothiazolinone and Methylchloroisothiazolinone (MCI/MI). Their quantity, in regards to the 3:1 ratio, is 0.0008 %. Does not any contain formaldehyde. Keep away from light. External use only. Do not use on injured, burnt or infected skin.*

The glasses **mask** shall be worn by all people present at the time of the flash. They enable you to mark out the areas that **must never** be flashed (e.g.: eyelashes, eyebrows...)



mask

Made in China

The **optic** cassette has a pre-programmed service life which guarantees the consistent quality of light emitted, from the first flash to the very last. The cassette is supplied together with its activation card. The **optic** cassette and its card must be replaced once the number of available flashes is exhausted.



optic

Made in France

The spray **clean** is used to clean and maintain:

- The optical parts of the mobile head of the applicator :
  - External optical parts: spray directly and wipe with a dry cotton cloth
  - Internal optical parts: **Never** spray directly on the internal optical parts. Take a dry cotton cloth and spray on the cloth, and then clean the filter (flat red part made of glass) with this dampened cloth. Finish cleaning with a dry part of the cloth.
- The device's touchscreen: **Never** spray directly on the touchscreen. Take a dry cotton cloth and spray on the cloth, and then wipe the screen with this dampened cloth. Finish cleaning with a dry part of the cloth.

**The spray clean must only be used once the device is unplugged and the optical parts are cold.**

If you intervene after using **E→One**, you must wait for the fan of the device to come to a complete stop before unplugging the base. This enables, among other things, the optical parts to cool down properly.



clean

Made in France

These self-adhesive **patches** are used to cover the small areas that must not be flashed (e.g. moles, birthmarks). They must be placed after shaving and before applying the **gel**. It is then possible to flash any area without having to worry about moles. The **patches** will be removed at the end of the session.

patches

Made in France



The plate **stop** is made from a material that is resistant to flashes. It enables you to cover an area on which the flash must not be used (e.g. tattoo). The glass tip of the applicator (optical guide) can also be placed in the middle between the **stop** and the skin.

stop

Made in France



These stencils **fun** are used to mark off the areas that must not be flashed in order to keep hair in fun shapes in certain areas. They must be placed after shaving completely and after applying the **gel**. The presence of the **gel** maintains these stencils in place. It is possible to flash in the middle between the edge of the stencil and the skin so as to have a clear delineation of the contours of the desired form.

fun (option)

Made in France



Check that your **E•One** is unplugged when you are undertaking its maintenance. If you intervene after using **E•One**, you must wait for the fan of the device to come to a complete stop before unplugging the base. This enables, among other things, the optical parts to cool down properly.

**NOTE: Unlike the fans located inside the applicator, the ones located inside the base of E•One only stops when the device is unplugged.**

## I BASE

### • Plastic parts

All plastic parts of **E•One** must be cleaned with a clean cloth, dampened with water (without any additives).

### • Touchscreen

The screen must be cleaned with a clean cloth that has been dampened with **clean** (**never spray clean directly on the touch screen**).

### • Power cord

Check its perfect condition (must not be pinched or crushed, no bare wires). Clean with a cloth that has been dampened with water (without any additives).

## I APPLICATOR

### • Mobile Head

Cleaning the optical parts (internal and external) of the mobile head with the spray **clean** before and after each use maintains your **E•One's** effectiveness. **Never spray clean directly on its optic cartridge or its filter.**

### • Body of the applicator

All plastic parts of the applicator must be cleaned with clean cloth that has been dampened with water (without any additives).

## I BASE CABLE TO APPLICATOR

This cable must always stay clean without any visible impairment. You must never bend it strongly or get it stuck. If in doubt about the cable's condition, you must stop using your **E•One** immediately.

## I THE AIR VENTS OF THE BASE AND THE APPLICATOR

The applicator and the base are ventilated. The grids are found on both the applicator and the base, on its lower and upper back part. You must check that all of these grids are clean and that there are no elements likely to clog them.

**IMPORTANT:** Be careful not to drop liquid into the ventilation grid.

## I STORAGE

- Store your **E•One** and its accessories in its box.
- Place your **E•One** in a room where the room temperature does not exceed 25°C for immediate use, away from excessive moisture (e.g. bathroom) and in a place where it cannot be subjected to vibrations (e.g. placed on a washing machine).
- If the device suffers from an impact, it will be necessary to check the optical parts in their entirety.
- Any visible damage to the optical parts: filter (flat red part made of glass), optical guide, tube, etc. must lead to an immediate cessation of use of the device.

# ASSISTANCE

## TECHNICAL DEPARTMENT

In case of doubt about the use of **E•One**, contact our technical department.  
Contact us via our website [www.esw-beauty.com](http://www.esw-beauty.com).

## ERROR MESSAGES

In addition to its own number (see table below), each error message is notified by the blinking of the warning icon (17).

Screen Display	Meaning	What to do?
01	No flash detected.	Contact our technical department. Contact us via our website <a href="http://www.esw-beauty.com">www.esw-beauty.com</a> .
02	The device does not detect the <b>optic</b> cartridge.	Insert the new <b>optic</b> cartridge by carefully following the handling instructions.
03 04 05 08	Your device is blocked.	Unplug your device and plug it back (follow instructions on page 29). If the problem persists, contact our technical department. Contact us via our website <a href="http://www.esw-beauty.com">www.esw-beauty.com</a> .
06 (and blinking of the temperature icon (19))	Temporary blocking.	Wait for the procedure that cools down the optical parts of the applicator to finish.
10 (and blinking of the icon that detects the activation card (18))	Loss of connection with the activation card.	Check that the activation card is present and running smoothly. You just need to place it back on it (see page 28).
13	You have inserted the wrong PIN code (when you started the device, the PIN code entered was different to the one previously recorded).	Follow the instructions about entering the code (see pages 40 & 41).
14	You have inserted the wrong PIN code (the 2 consecutive PIN codes entered are not identical).	Contact our technical department. Contact us via our website <a href="http://www.esw-beauty.com">www.esw-beauty.com</a> .



# TECHNICAL CHARACTERISTICS

## MARKINGS

<b>REF</b> : <b>E→One</b>	Reference of the hair removal device <b>E→One</b> (Clinic Acces, SC, RC et RC Multi).
<b>SN</b> .....	Unique serial number of your <b>E→One</b> .
 E-SWIN Rue des Côtes d'Orval ZA de la Prévôté 78550 Houdan - FRANCE	Year of manufacture of your device and address of the manufacturer.
<b>CE</b> 0197	Medical device conforming to requirements of the European Directive 93/42/CEE, certified by independent body.
<b>IP2X</b>	Device protected against solid foreign body of 12,5 mm in diameter or more (IP rating).
	Logo corresponding to a degree of protection against electric shock for parts that are applied onto the patient (Part to be applied - Type BF).
	Class II electrical device
	Device must be used indoors.
	Keep the device dry.
	Keep away from light and heat.
	It is compulsory to refer to the instructions in the user manual.
100 - 240 V~ 50-60 Hz 240 VA	Operating conditions - supply voltage (alternating current), frequency of the mains voltage, power.
	Warning, dangerous voltage device.
	Global safety mark for electronic devices.
	Respect upper and lower temperature limits indicated beside this logo.
	Do not use this product after the deadline specified beside this logo ( <b>gel</b> ).
<b>LOT</b>	The batch number of the product is indicated beside this logo ( <b>gel</b> ).

## SPECIFICATIONS

Impact points, specifications	2 cm x 3 cm (6 cm <sup>2</sup> )	
Speed	1 pulse each 3,8 to 6 seconds	
Technology	Intense pulsed light	
Wavelength	>580 - 1200 nm	
Charging time / energy source	Continuous operation	
Dimensions (L x W x H)	240 x 210 x 390 mm max	
Weight	5,1 kg max	
Shipping dimensions (L x W x H)	510 x 290 x 510 mm	
Shipping weight	8 kg max	
Noise	53 dBA max	
Electrical installation requirements	100 - 240 VAC	
Maximum power consumption	240 VA	
Frequency	50/60 Hz	
Temperature	Working	+5 à +25°C
	Stockage	-5 à -65°C
Relative humidity	30 - 93 %	

## RECYCLING AND TREATMENT



Instructions for treatment of used products: the WEEE (Waste of Electrical and Electronic Equipment) Directive 2002/96/CE has been implemented to ensure that the products are recycled by using the best available techniques for treatment, recovery and recycling, and thus to contribute to the protection of the environment and human health.

Your product has been designed and manufactured with components and high quality materials that can be recycled and reused.

E-Swin SAS is affiliated to an eco organization that is responsible for collecting and processing of end-of-life products.

## GUIDANCE AND MANUFACTURER'S DECLARATION

### ELECTROMAGNETIC EMISSIONS

**E•One** is intended for use in the electromagnetic environment specified below. The user of **E•One** should assure that it is used in such an environment.

Emissions Test	Compliance	Electromagnetic Environment - Guidance
RF emissions CISPR 11	Group 1	<b>E•One</b> uses RF energy only for its internal function. Therefore, its radiated emissions are very low and are not likely to cause interference in nearby electronic equipment.
RF emissions - CISPR 11	Class B	<b>E•One</b> is suitable for use in all establishments, including domestic establishments and those directly connected to the public low voltage power supply network that supplies buildings use for domestic purpose.
Harmonic emissions - IEC 61000-3-2	Class A	
Voltage fluctuations Flicker emissions - IEC 61000-3-3	Passed	

### ELECTROMAGNETIC IMMUNITY

**E•One** is intended for use in the electromagnetic environment specified below. The user of **E•One** should assure that it is used in such an environment.

Immunity test	IEC60601 Test Level	Compliance Level	Electromagnetic Environment - Guidance
Electrostatic Discharge (ESD) IEC 61000-4-2	± 6 kV contact ± 8 kV air	± 6KV contact ± 8kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient / burst IEC 61000-4-4	± 2 kV for power supply lines ± 1 kV for input/output lines	± 2KV for power supply lines. Not applicable.	Mains power quality should be that of a typical public low voltage power supply network.
Surge IEC 61000-4-5	± 1 kV differential mode ± 2 kV common mode	± 1 kV differential mode ± 2 kV common mode	Mains power quality should be that of a typical public low voltage power supply network.
Voltage dips, short interruptions and voltage variations on power supply input lines. IEC 61000-4-11	< 5 % U <sub>T</sub> (>95% dip in U <sub>T</sub> ) for 0,5 cycle. 40 % U <sub>T</sub> (60% dip in U <sub>T</sub> ) for 5 cycles. 70 % U <sub>T</sub> (30% dip in U <sub>T</sub> ) for 25 cycles. < 5 % U <sub>T</sub> (>95% dip in U <sub>T</sub> ) for 5 seconds.	< 5 % U <sub>T</sub> (>95% dip in U <sub>T</sub> ) for 0,5 cycle. 40 % U <sub>T</sub> (60% dip in U <sub>T</sub> ) for 5 cycles. 70 % U <sub>T</sub> (30% dip in U <sub>T</sub> ) for 25 cycles. < 5 % U <sub>T</sub> (>95% dip in U <sub>T</sub> ) for 5 seconds.	Mains power quality should be that of a typical public low voltage power supply network. If the user of <b>E•One</b> requires continued operation during power mains interruption, it is recommended that <b>E•One</b> be powered from an uninterruptible power supply or a battery.
Power frequency (50/60Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristics of a typical location connected to public low voltage power supply network.
Conducted RF IEC 61000-4-6	3Vrms de 150Hz to 80MHz	3Vrms	Portable and mobile RF communications equipment should be used no closer to any part of <b>E•One</b> , including cables, than the recommended separation of distance calculated from the equation applicable to the frequency of transmitter: $d = 1,2 \sqrt{P}$ $d = 1,2 \sqrt{P}$ 80MHz to 800 MHz. $d = 2,3 \sqrt{P}$ 800 MHz to 2,5 GHz. where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m). Field strength from fixed RF transmitters, as determined by an electromagnetic field survey <sup>a</sup> should be less than the compliance level in each frequency range <sup>b</sup> . Interference may occur in the vicinity of equipment marked with the following symbol: 
Radiated RF IEC 61000-4-3	3V/m de 80 MHz to 2,5 GHz	3V/m	

## ELECTROMAGNETIC IMMUNITY

**NOTE 1:**  $U_T$  is the a.c mains voltage prior to application of the test level.

**NOTE 2:** At 80 MHz and 800 MHz, the higher frequency range applies.

**NOTE 3:** These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which **E•One** is used exceed the applicable RF compliance level above, **E•One** should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating **E•One**.

b Over the frequency range 150 kHz to 80 MHz, field strength should be less than 3 V/m.

## RECOMMENDED SEPARATION DISTANCES BETWEEN PORTABLE AND MOBILE RF COMMUNICATIONS EQUIPMENT AND **E•One**

**E•One** is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or user of **E•One** can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communication equipment (transmitters) and **E•One**, as recommended below, according to the maximum output power of the communications equipment.

Rates max. output power of transmitter - (W)	Separation distance according to frequency of transmitter (m)		
	150 Hz to 80 MHz ( $d = 1,2 \sqrt{P}$ )	80 MHz to 800 MHz ( $d = 1,2 \sqrt{P}$ )	800 MHz to 2,5 GHz ( $d = 2,3 \sqrt{P}$ )
0,01	0,12	0,12	0,24
0,1	0,37	0,37	0,74
1	1,20	1,20	2,24
10	3,70	3,70	7,40
100	12	12	24

For transmitters rated at a maximum output power not listed above, the recommended separation distance  $d$  in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where  $P$  is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

**NOTE 1:** At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

**NOTE 2:** These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

## I CERTIFICATIONS

E-SWIN SAS, the company that is the exclusive manufacturer of the device **E•One** has been awarded an ISO 13485 certification.

## I COMPLIANCE

E-Swin SAS declares that **E•One** complies with the essential requirements of Directive 93/42/EEC, Annex II, Article 3 and has the CE mark under the responsibility of the TUV.

This device therefore complies with the requirements and standards: EN 60601-1, EN 60601-1-2, EN 60601-1-6, EN 60601-1-11.

## I PRECAUTIONS FOR USE

Never let either the base or the applicator come into contact with water. Never open the base or the applicator as you could be exposed to high voltage. Never use **optic** cartridges and accessories other than those designated and sold for **E•One** and by E-SWIN SAS.

## I ENVIRONMENTAL PROTECTION

Please comply with local regulations when disposing of packaging and consumables. Wherever possible, try to promote recycling.

Your product is guaranteed for personal home use for a period of two years.

Any connection error, handling error, any use other than for hair removal treatment and in a general way, any other use outside the conditions described in this manual will void the warranty.

E-SWIN SAS will not be held responsible for any accident that may occur due to improper use or non-compliance with the prescriptions of the present manual or the various information provided through the labelling or the touchscreen of **E•One**.

The manufacturer's two-year warranty will cover parts and labour only if the device is returned with all its elements in its original packaging.

You must keep the whole original packaging in which your **E•One** has been delivered to you.



For all after-sales and spare parts questions, please visit our website [www.esw-beauty.com](http://www.esw-beauty.com) or e-mail us [commercial@esw-beauty.com](mailto:commercial@esw-beauty.com)

# ESWIN

ZA de la Prévôté  
Rue des Côtes d'Orval  
78550 Houdan  
FRANCE  
01 30 46 37 61



M009GB000C\_\_\_ rev. C 2021/03/18

[www.esw-beauty.com](http://www.esw-beauty.com)

CE<sub>0197</sub>